## SAFETY CABINET REPLACEMENT PARTS LIST AND USE INSTRUCTIONS



Use this cabinet principally for storing containers of flammable and combustible liquids.

We do not make any recommendations for external venting of cabinets. Every cabinet is constructed with two built-in vents. Each vent is equipped with a fire baffle (flame arrestor) and connections for 2" pipe fitting for external exhaust. Check local, State and Federal fire codes that may be applicable to your particular use of the cabinet. Some localities require all cabinets to be vented externally, others do not. In the absence of any codes we recommend that you exercise good safety practices in the decision to vent and the method and materials used. Consultation with qualified safety personnel to determine your specific needs is recommended. Cabinets are shipped with two plugs installed in each vent. These plugs are there mainly to protect the flame arrestor in the vent from being damaged during shipping and handling. Plugs should be removed to permit the vents to function.


Except for installing shelves, the cabinet is ready for use. Four shelf tracks are permanently fastened to the interior side walls. Install shelves in the clips of these tracks. It may be necessary to bend a clip in order to permit the shelf edge to drop in place. (See illustration B).

After installing shelves, be sure you level the cabinet. Do this by adjusting the leveling feet at each corner. This is important to assure that the doors can close properly and particularly if you purchased a self-closing sliding door model. If the cabinet is not level, it is possible the sliding door could bind and not close completely.

Sliding doors are spring loaded and will automatically close after opened. In order to overcome the spring action when you want the doors to remain open, fasten the chain hanging on the left inside wall to the base of the roller assembly - mounted in the upper right hand corner of the door. (See illustration A) Note the chain has a lead fusible link. When the door is chained open, it will automatically close in event of fire or extreme heat in the area as the link will melt at  $160^{\circ}$  F and separate the chain permitting spring loaded action of the door to automatically close it.

Cabinets require minimal, if any, periodic maintenance. Most function trouble free with very little attention. It may be desirable to occasionally oil the door hinges lightly. If you have the sliding door model, you may find after awhile it may be necessary to "recondition" it to keep it shutting smoothly. Of course, this depends on the type of care and service you give it. Most never need attention but occasionally rough treatment or damage can cause the doors to not close properly.

Should you need any replacement parts, contact your distributor or Eagle Manufacturing Company to order replacement parts. When ordering, specify your cabinet model and part number from the following list: (See Reverse Side)

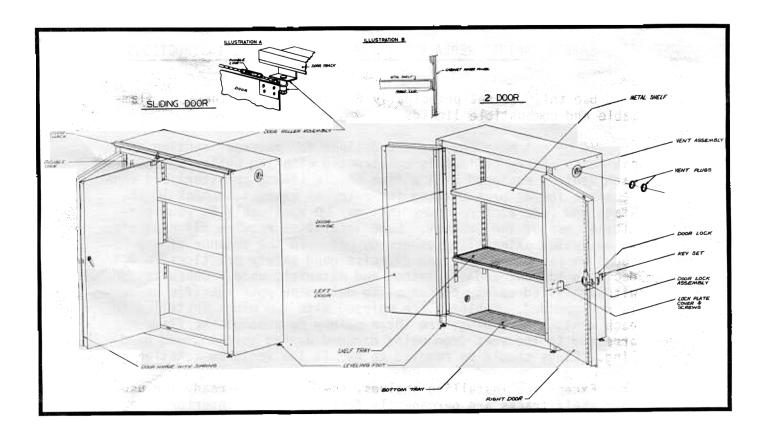

	CRÁ-30, CRA-32, CRA-45 and CRA-47 Poly. Shelf Tray (has locking tabs) for mod: CRA-30, CRA-32, CRA-45 and CRA-47 Metal Shelf Epoxy Coated for mod: CRA-30, CRA-32, CRA-45 and CRA-47 Metal Shelf for mod: 1930, 1932, 1945, and 1947	C-88 C-89 C-90 C-91 C-92 PART NO. C-101 C-102 C-103	Lock plate cover and screws (all models) Door lock assembly - specify cabinet model. Vent assembly Rivets Plugs for vents  DOORS  Complete sets - Painted and decals - #1930, #1932 Complete sets - Painted and decals - #1945, #1947 Complete sets - Painted and decals - #1960, #1962
CRA-1916 CRA-1917 CRA-1918	PI-30, PI-32, PI-45 and PI-47 Poly. Bottom Tray for mod: CRA-60 and CRA-62 Poly. Shelf Tray (has locking) tabs) for mod: CRA-60 and CRA-62 Metal Shelf Epoxy Coated for mod: CRA-60 and CRA-62	C-104 C-105 C-106 C-108	Complete sets - Painted and decals - #PI-30, #PI-32 Complete sets - Painted and decals - #PI-45, #PI-47 Complete sets - Epoxy painted and decals - #CRA-30, #CRA-32 Complete sets - Epoxy painted and decals - #CRA-60 #CRA-62
PART NO. C-80 C-81 C-82 C-83 C-84 C-85 C-86 C-87	MISCELLANEOUS PARTS Fusible Link - (sliding door models only) Leveling foot - (all models) Door lock with keys - (all models) Key set (2 keys) - specify number of key or lock. Door roller assembly - (sliding door models only) Door track - (sliding door models only) Door hinge - (no springs) Door hinge with springs - (sliding door models only)		Individual doors available - specify left or right (when facing cabinet) and cabinet model number.  Complete door sets or individual doors can be furnished unpainted if desired. Please specify.  Decals seldom need replaced, but should you ever want to do so, specify model number of cabinet and decals wanted.

## **EAGLE MANUFACTURING COMPANY**

24th & CHARLES STREET WELLSBURG, WV 26070 (304) 737-3171

Established 1894

**Incorporated 1897** 

PRINTED IN THE UNITED STATES OF AMERICA SERVING THE TRADE SINCE 1894